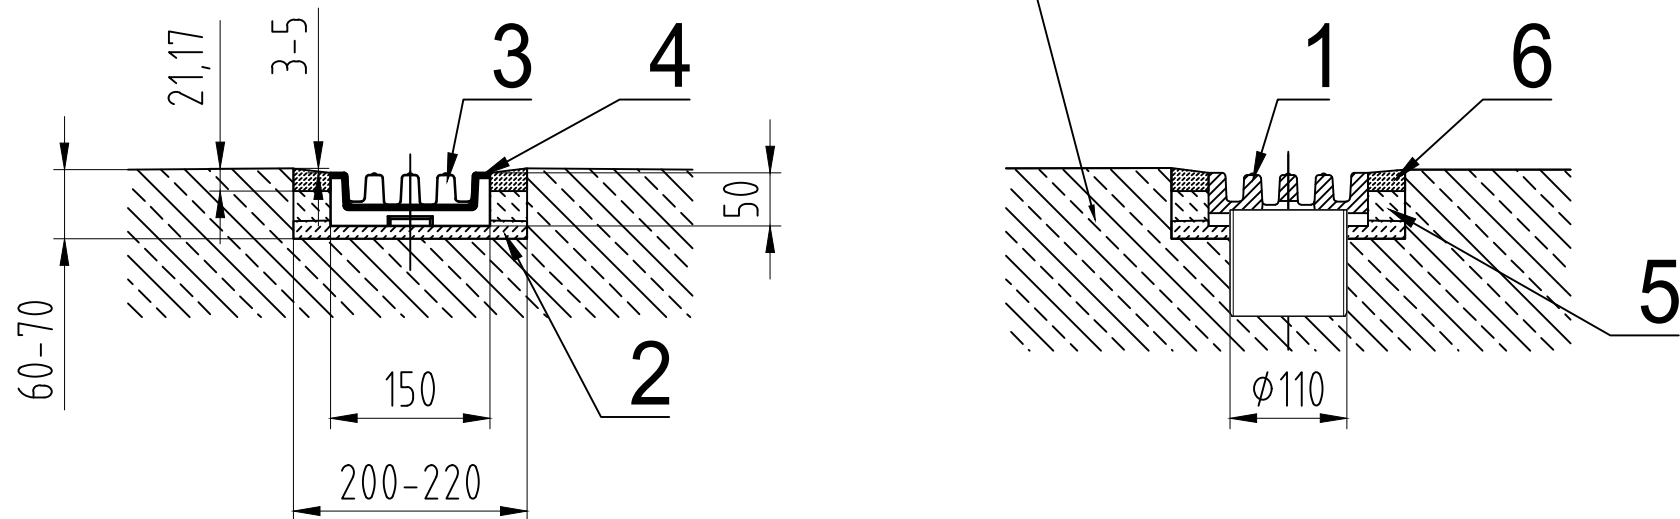


	1	2	3	4																			
A	Le plafond ou dalle en pente (béton imperméable) 																						
B																							
C	Notice d'installation: 1. Vérifiez le niveau du sol. faites les ajustements nécessaires de l'épaisseur de la couche de mortier (repère 2) afin que le fond du caniveau ACO après installation soit horizontal ou avec une pente en direction de la sortie. 2. Commencez la pose du caniveau ACO à partir du caniveau avec la sortie (repère 1). 3. Les caniveaux (repère 3) doivent être posés sur une couche de mortier d'une classe min. M20 (repère 2) d'épaisseur min. 0,5 cm. 4. Appuyez le caniveau dans le mortier et nivelez-le. Remarque : ne frappez pas directement le caniveau avec un marteau. utilisez un élément intermédiaire, par ex. panneau OSB, contreplaqué d'une épaisseur de 2,5 cm. 5. Avant d'installer le dernier caniveau, mettez l'obturateur. 6. Scellez la jonction des caniveaux (repère 4) avant de remplir les gorges entre le caniveau et le sol : nettoyez, dégraissez (par ex. avec de l'acétone) et préparez les surfaces des gorges pour le joint entre les caniveaux ACO. Appliquez le joint selon les préconisations du fabricant, dans les gorges entre les caniveaux. 7. Les matériaux recommandés pour l'étanchéité des joints: • EUROLASTIC TC30 et EUROLASTIC-Primer S2, fournis par ACO • Sikaflex PRO 3WF et Primer 3N par SIKA 8. Une fois les joints secs, effectuez un test d'étanchéité du caniveau: scellez la sortie du caniveau et remplissez le caniveau avec de l'eau jusqu'à la hauteur maximale. Le test est réussi si aucune fuite n'a détecté dans les 30 minutes suivant la fin du remplissage du caniveau. S'il y a des fuites, améliorez l'étanchéité et répétez le test de fuite. 9. Appliquez du mortier sur le côté du caniveau (repère 5) jusqu'à une hauteur d'environ 2 cm sous le bord du caniveau. Après la prise du mortier, versez le remplissage de la gorge avec du mortier expansif, par ex. Ceresit CX15 (repère 6) selon les préconisations du fabricant.																						
D																							
E																							
F	<table><tr><td rowspan="2"> ACO S.A.S "LE QUAI A BOIS" - BP85 27940 NOTRE DAME DE L'ISLE Tel: 0232513055 www.aco.com </td><td colspan="2">technical reference: paul bline</td><td>document type: marketing drw</td></tr><tr><td>created by: Paul bline</td><td>reviewed by:</td><td>projection:ISO-E  scale: ####</td></tr><tr><td colspan="4">title: 2023-006 / Gamme Multislot ACO Multislot installation instructions for bottom slab Instructions d'installation du ACO Multislot dans une dalle</td></tr><tr><td colspan="2">The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design. observe copyright by ISO 16016</td><td>drawing-no: 1368214</td><td>index: 001</td></tr><tr><td colspan="2"></td><td>release date:</td><td>sheet:</td></tr></table>				 ACO S.A.S "LE QUAI A BOIS" - BP85 27940 NOTRE DAME DE L'ISLE Tel: 0232513055 www.aco.com	technical reference: paul bline		document type: marketing drw	created by: Paul bline	reviewed by:	projection:ISO-E  scale: ####	title: 2023-006 / Gamme Multislot ACO Multislot installation instructions for bottom slab Instructions d'installation du ACO Multislot dans une dalle				The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design. observe copyright by ISO 16016		drawing-no: 1368214	index: 001			release date:	sheet:
 ACO S.A.S "LE QUAI A BOIS" - BP85 27940 NOTRE DAME DE L'ISLE Tel: 0232513055 www.aco.com	technical reference: paul bline		document type: marketing drw																				
	created by: Paul bline	reviewed by:	projection:ISO-E  scale: ####																				
title: 2023-006 / Gamme Multislot ACO Multislot installation instructions for bottom slab Instructions d'installation du ACO Multislot dans une dalle																							
The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design. observe copyright by ISO 16016		drawing-no: 1368214	index: 001																				
		release date:	sheet:																				